


ELNA 434 CLEAR VIEW COVER STITCH FOOT ENGLISH


Turn off the power switch before attaching the foot.

The markings (A, B and C) on the tip of foot indicate the needle positions that can be used for guiding the fabric.

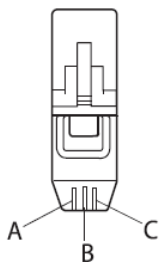

Cover stitch sewing

Fold the edge of the fabric to the wrong side and press. Draw a line (D) with tailors chalk on the right side of the fabric to mark the fabric edge. Place the fabric so that the left needle drops just to the left of the marked line (E). Lower the presser foot. Sew carefully along the marked line. When finished sewing, raise the presser foot and remove the fabric to the rear. Draw the needle threads to the wrong side of the fabric and knot them together.

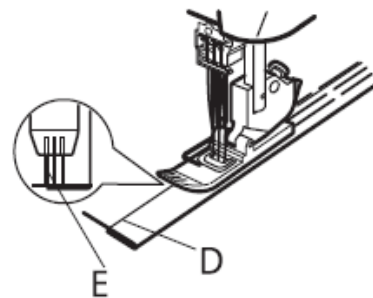

Free arm sewing

Remove the extension table. Stitch the hem in the same manner as above. Continue to sew over the stitches 2" (4 to 5 cm) beyond the starting point. Trim the threads at the beginning and the end.

